



Recessed Floor Track Installation Instructions

INSTALLATION INSTRUCTION STEPS

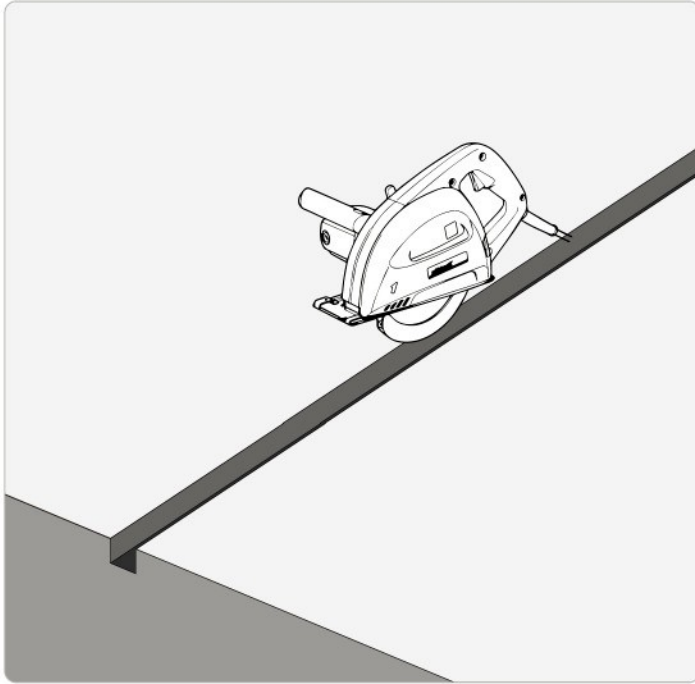


Step 1

After the upper rail is installed, check vertical alignment with a measurement tool, mark on the ground, and then use a cutting machine to make a groove.

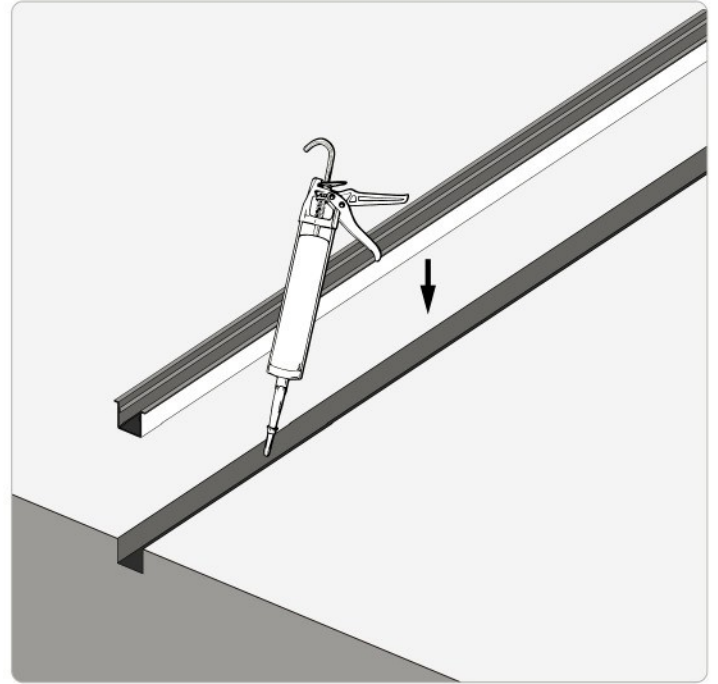


Step 2

Apply heavy-duty construction adhesive into the groove, then press the track into the groove.

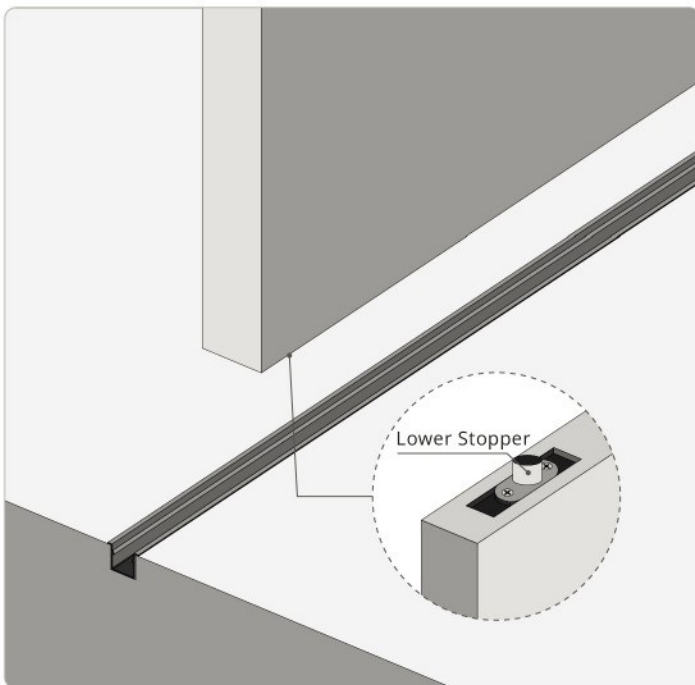

Step 3

Tighten the positioner at the bottom of the door panel, adjust the position, and the positioner into the ground rail.

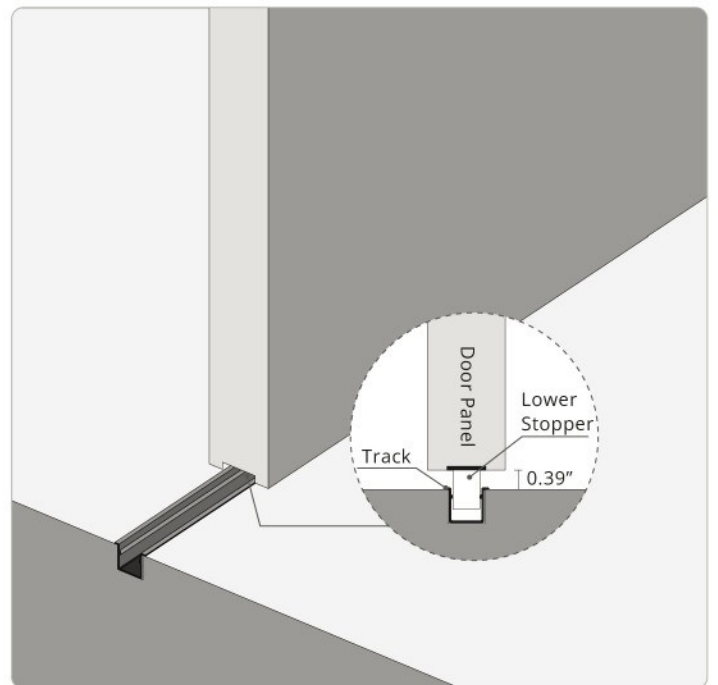

Step 4

Installation is completed.